## E-3WAY



The E-3Way switch allows three Ozroll Drive Systems to be operated separately by only one E-Port. Acting as a circuit breaker, the E-3Way receives the power delivered from the controller and relays it to one of three shutters selected at the time by the operator.

This makes it a convenient and cost effective option for operating multiple shutters within a close proximity, such as bay or box windows.

Generally for the most user friendly operation, designate shutters 1-3 from left to right.

For example:

- 1 = left window
- 2 = middle window
- 3 = right window

When you press the number related to the desired shutter an LED will light to indicate the selection has been made and you can then use the E-Port to operate that shutter.

This selection will remain valid for 60 seconds, at which point the E-3Way will revert back to the default shutter.

The default shutter can be selected by pressing and holding the preferred number for 5 seconds until the correlating LED flashes.

The E-3Way is powered by a CR2430 battery. If no LEDs light when the buttons are pressed the battery may need replacing.

