

1 AC Moco & 2 AC Moco


Changing mode




Moco end product programming


IMPORTANT NOTES

The LEDs on the moco correspond to the following:


LED Colour	Label	LED indicates
YELLOW	Mode	Screens mode
ORANGE	IB	Venetian EU mode
RED		Venetian US mode

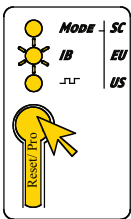

 Press and hold the MoCo program button for 2 seconds




The default mode LED illuminates

 


Release the program Button


2 S

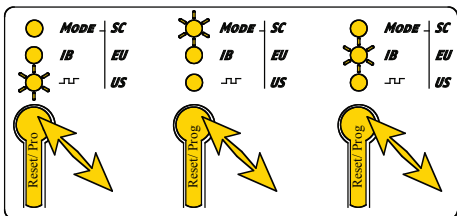

Press briefly the MoCo Program button to cycle between modes

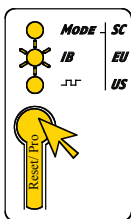


 When the required mode LED is lit, press and hold the Program button for 2 seconds




The mode LED turns off

 2 S



Release the program Button

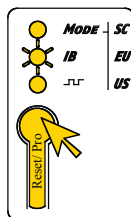


To check the mode, briefly tap the MoCo Program button. The indicator will illuminate



Complete

1 AC Moco & 2 AC Moco

Changing mode

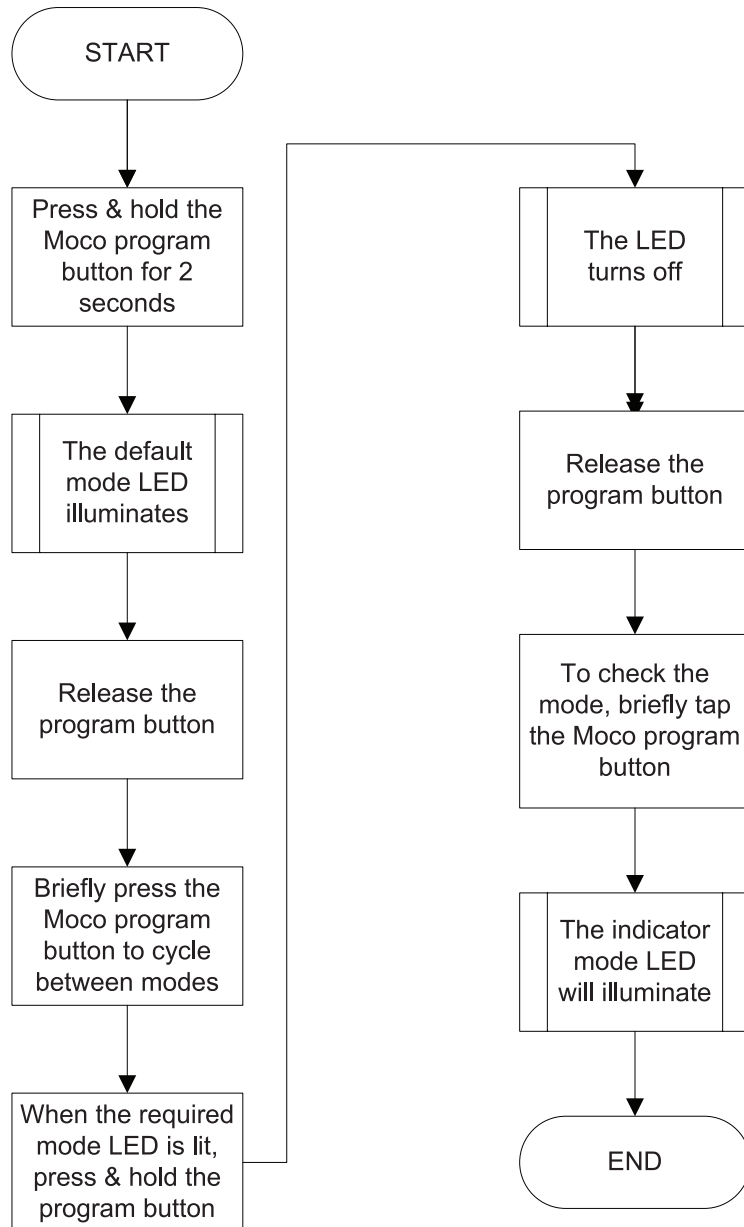

IMPORTANT NOTE:

LEDs on Moco correspond to the following:

- Yellow: Screens mode
- Orange: Venetian EU mode
- Red: Venetian blinds US mode