


# 4 AC Moco

## Adding remote




### Moco Remote programming 4 AC


Note: Requires RTS card

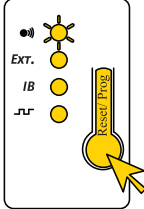


Press and hold the MoCo program button for 2 seconds

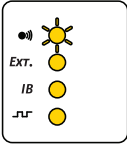


The green LED illuminates

 


Release the program Button

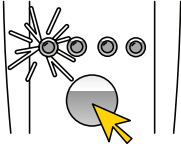


Select the channel you require

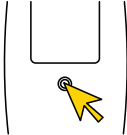


Press the Program button on the remote briefly

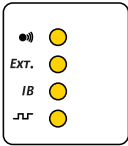

The green LED turns off

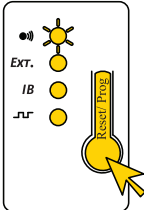

Press and hold the MoCo program button for 2 seconds

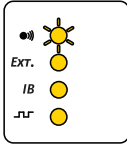


The green LED illuminates



Use the Up button to cycle through the motors




 When a motor not required on this channel moves press the Stop button for 2 seconds




The Motor Jiggles

Repeat the same selection process for deleting additional motors

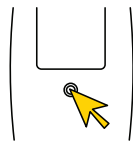

Press the Program button on the remote briefly to finalise changes

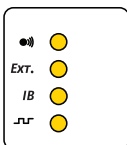


The green LED turns off



Complete

# 4 AC Moco

## Adding remote

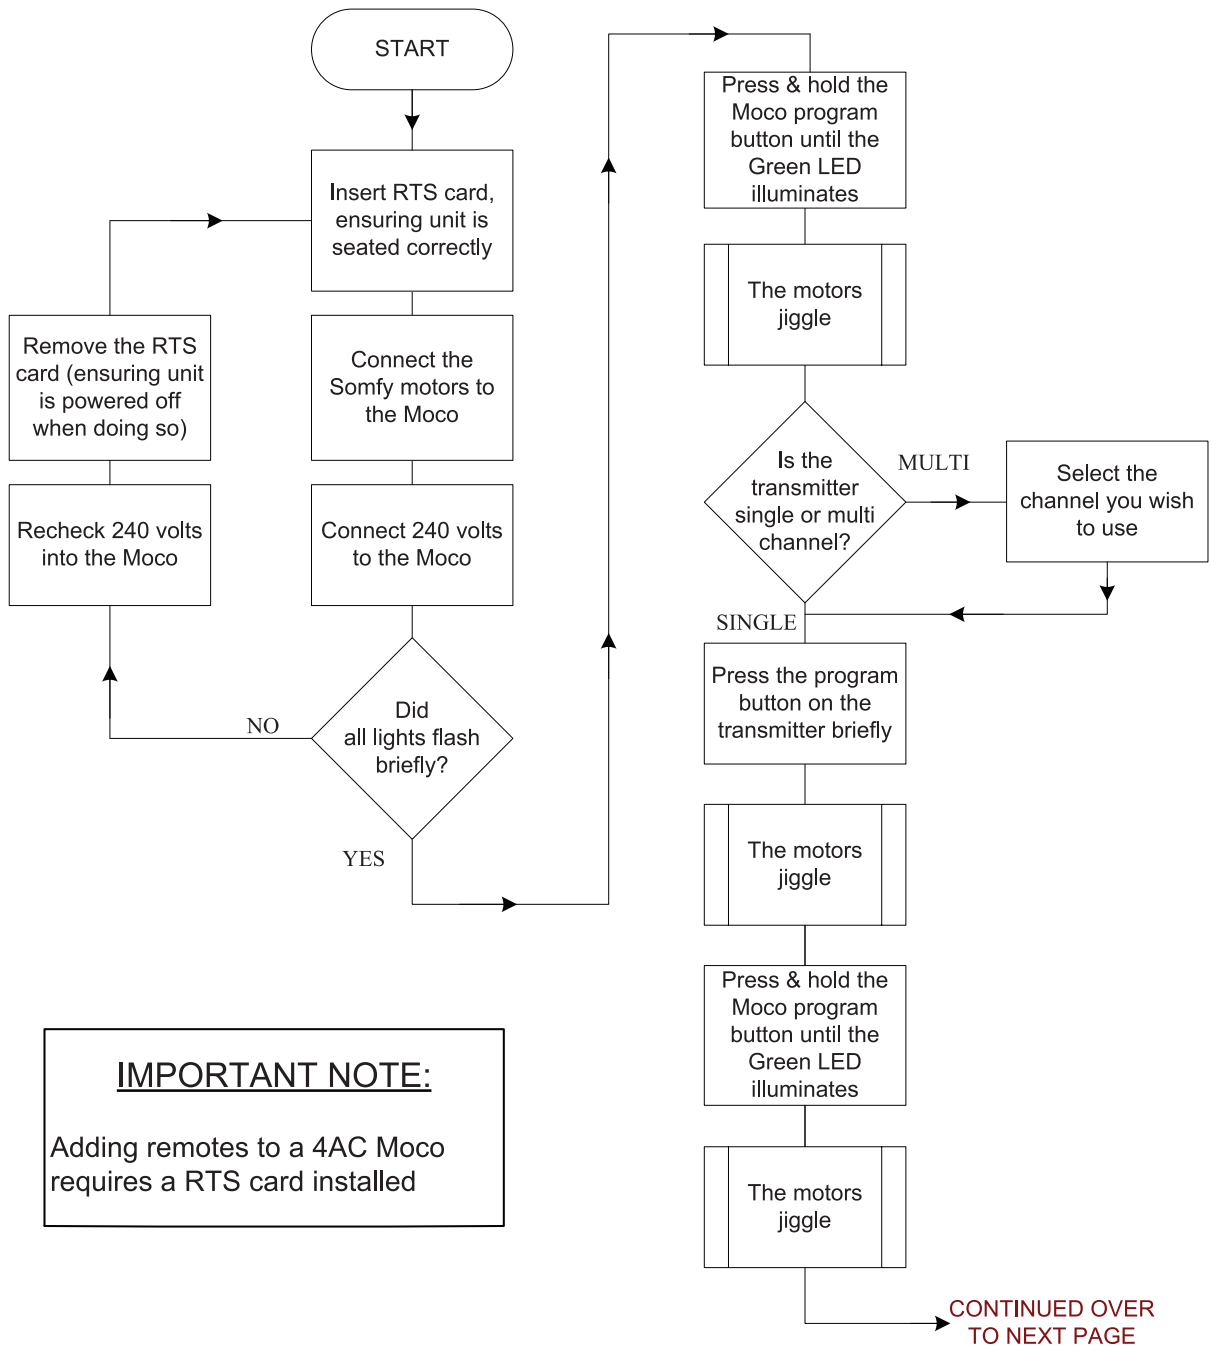

**IMPORTANT NOTE:**  
 Adding remotes to a 4AC Moco requires a RTS card installed

# 4 AC Moco

## Adding remote



FROM PREVIOUS PAGE

