

Altus RTS & Sonesse RTS


Adjusting motor limit positions




Note: the following procedure will only work if the limit is accessible, otherwise please refer to 'erasing the memory of the motor' section.

1 Adjustment of the lower limit position


Press the Down button and send the product to the existing lower limit position.

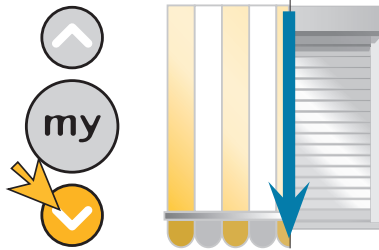


Press and hold the Up and Down buttons until the product jiggles.

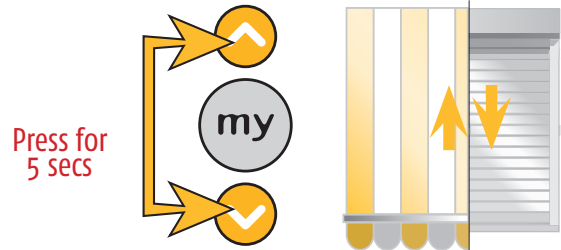

Adjust to the correct position using either the Up or Down button.

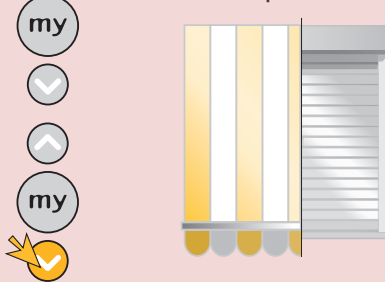


Press and hold the **my** button until the product jiggles.

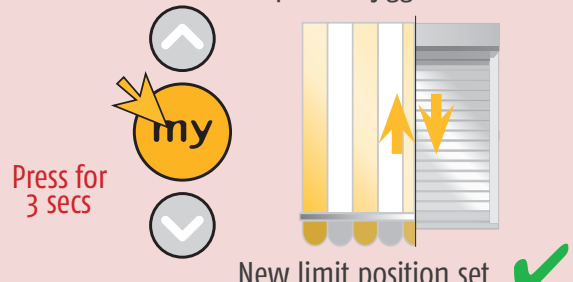


New limit position set ✓

2 Adjustment of the upper limit position - Not applicable for Orea

Press the Up button and send the product to the existing upper limit position.

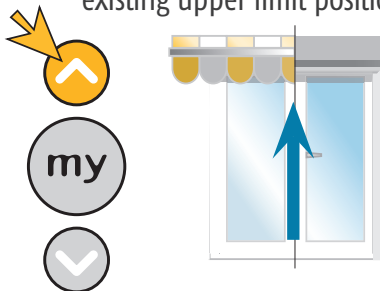


Press and hold the Up and Down buttons until the product jiggles.

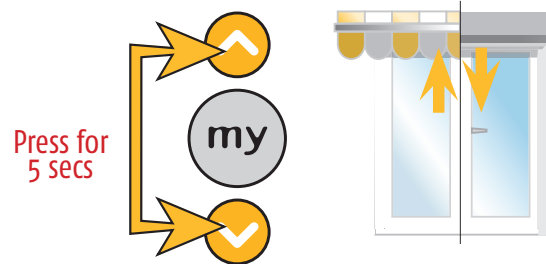

Adjust to the correct position using either the Up or Down button.



Press and hold the **my** button until the product jiggles.

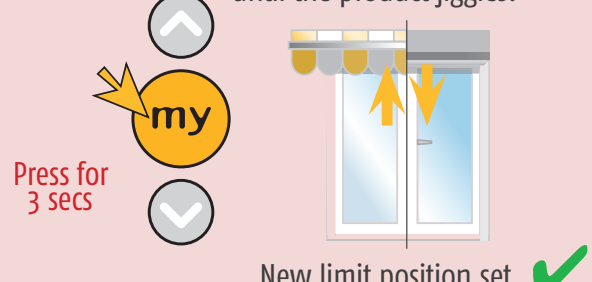

New limit position set ✓

Altus RTS & Sonesse RTS

Adjusting motor limit positions



IMPORTANT NOTE:

This procedure will only work if you have an existing remote that has already been programmed to the motor.

