


5 Setting the Lower Limit Position

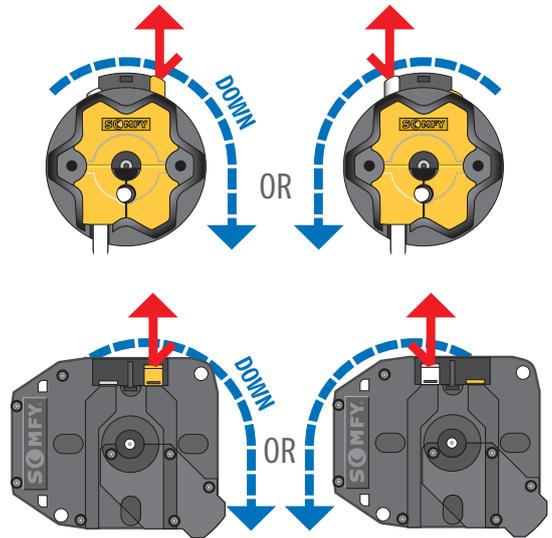

Press Down and then stop the product at the Down limit position. Press the corresponding limit button on the motor until the button springs up.

✓ The lower limit position has been set.




6 Setting the Upper Limit Position




Press Up and then stop the product at the Up limit position. Press the corresponding limit button on the motor until the button springs up.

✓ The upper limit position has been set.

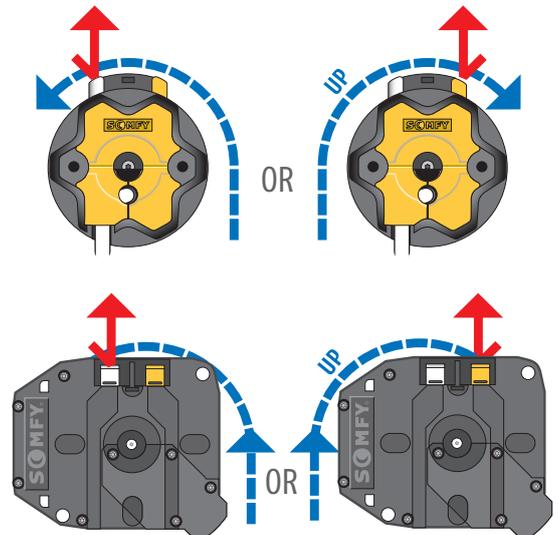

7 Programming the RTS Control to the motor

Press the program button on the RTS control until the product jiggles.

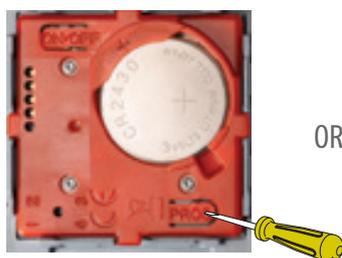


Smoove RTS


OR



Situo RTS

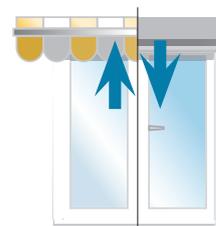

jiggle = control recorded ✓

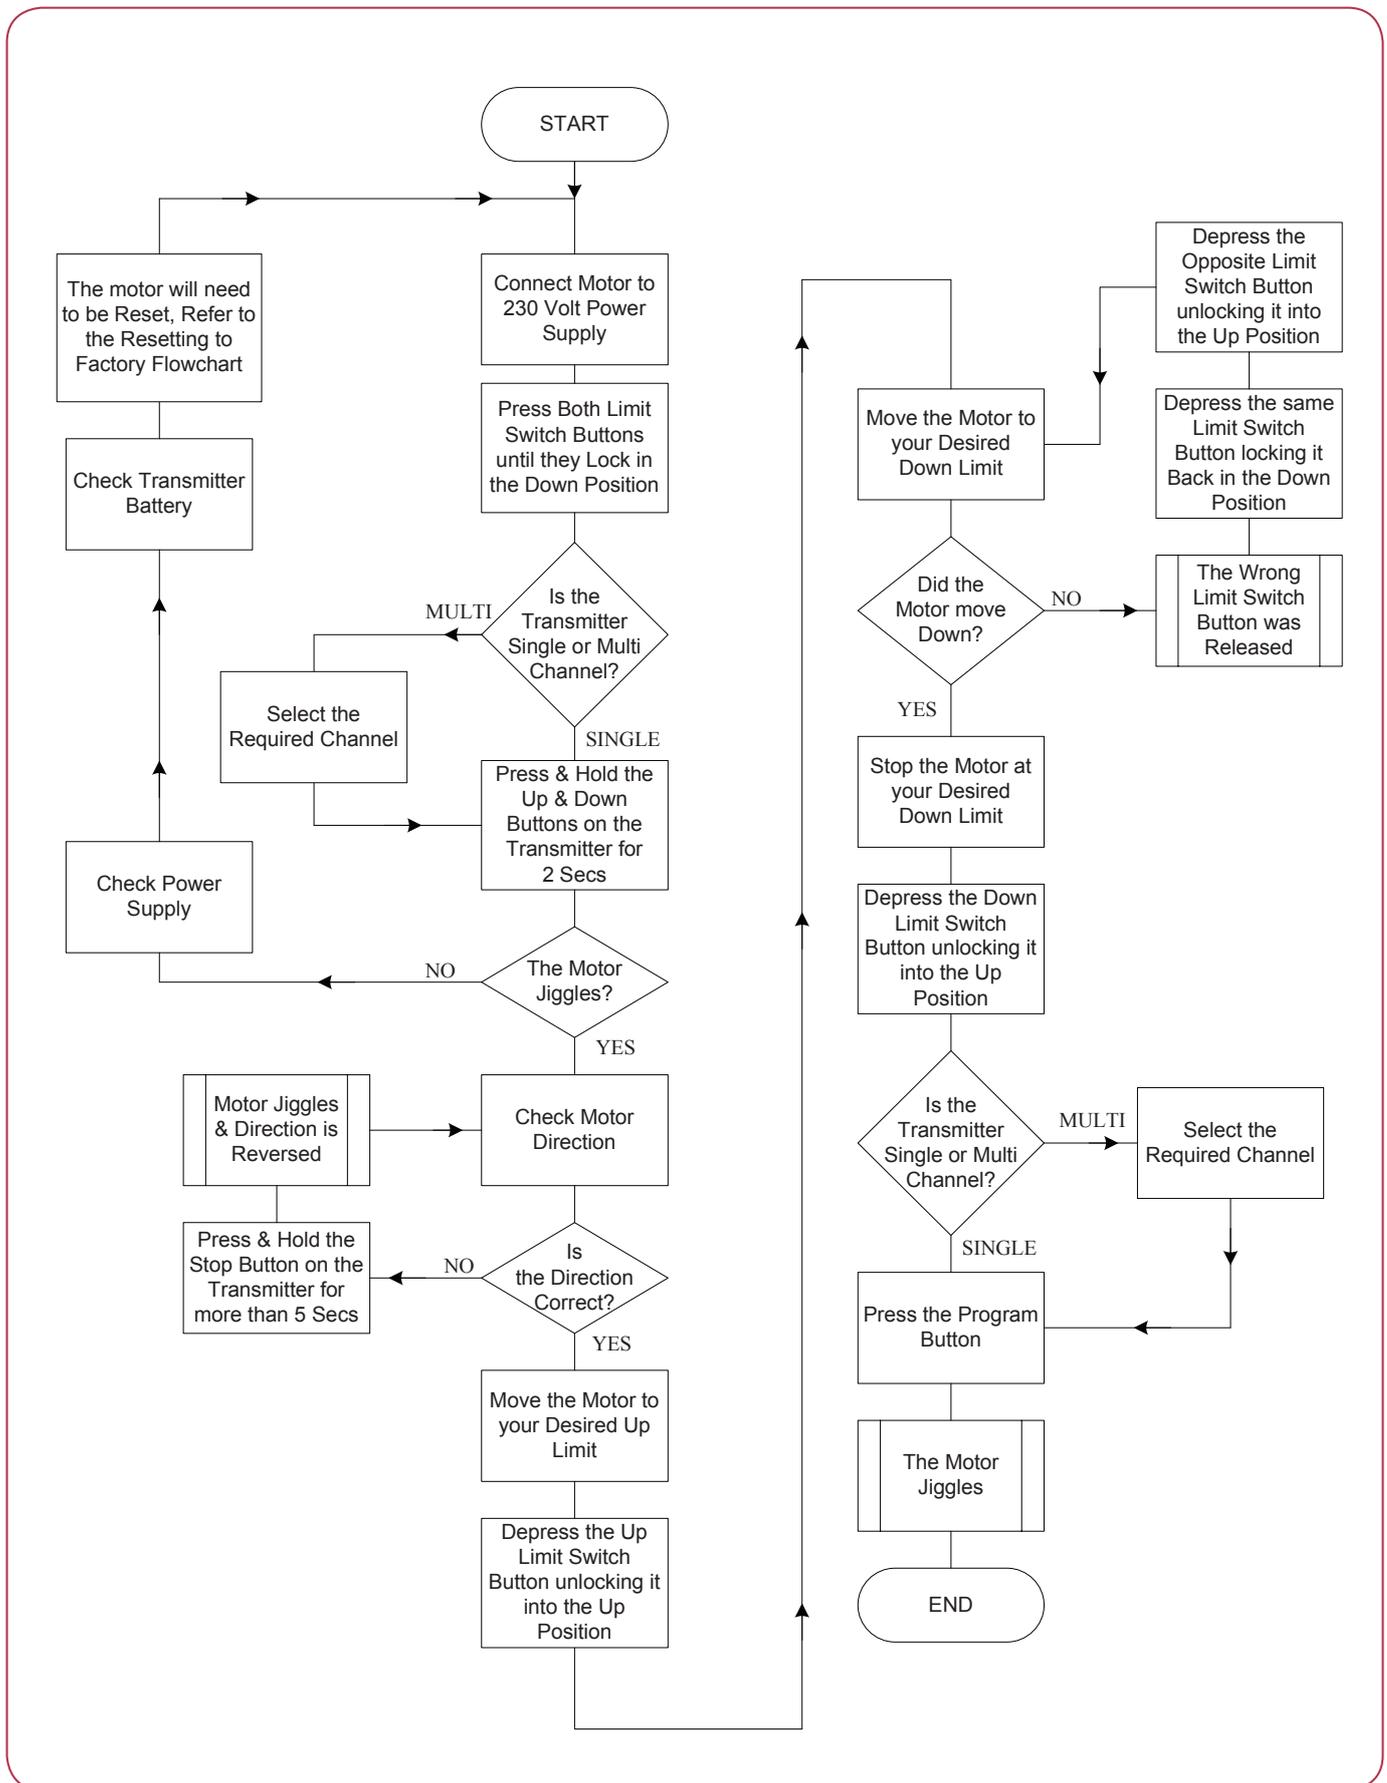

Maestria 50 RTS

Programming mode selection



Manual limit setting – manual upper and lower limit setting.

Semi-automatic limit setting – automatic upper limit and manual setting of the lower limit. Screen requires hard upper stop.

Automatic limit setting – automatic setting of both upper and lower limit. Screen requires hard upper and lower stops.

		End Product		
		No Lock	Automatic Lock	Manual Lock
Limit Setting	Manual	Page 77	Page 88	Page 95
	Semi-Automatic	Page 80	Page 92	Page 99
	Automatic	Page 83	N/A	N/A