

Keytis 2 RTS

Overview



Keytis Overview



Channel Button

Channel Button



Press for
3 secs

1. Select the channel then hold the program button on the back of the Situo remote until the motor jiggles.



2. Open the Keytis remote and locate the two strips labelled 'PROG' next to it. Use a flathead screwdriver to short the contacts until the LED on the front begins flashing.



3. While the LED is flashing, press one of the channel buttons, the motor will jiggle.

Troubleshooting

The LED on the Keytis does not flash

Ensure the battery is correctly installed. Change the battery.

The pairing didn't work

The Keytis remote could be in the wrong radio protocol. Pinpoint the small silver strip labelled "ADR" next to the battery support. Use a screwdriver to make contact between the ADR strip and the battery; the LED flashes. Then press the remote control key and the LED turns off.

The RTS motor could have too many controls already paired. Reset and reprogram the motor.

Warning: this clears all previous controls.