
RTS Motors "My" position programming



Note: the following procedure will only work after programming has been completed.

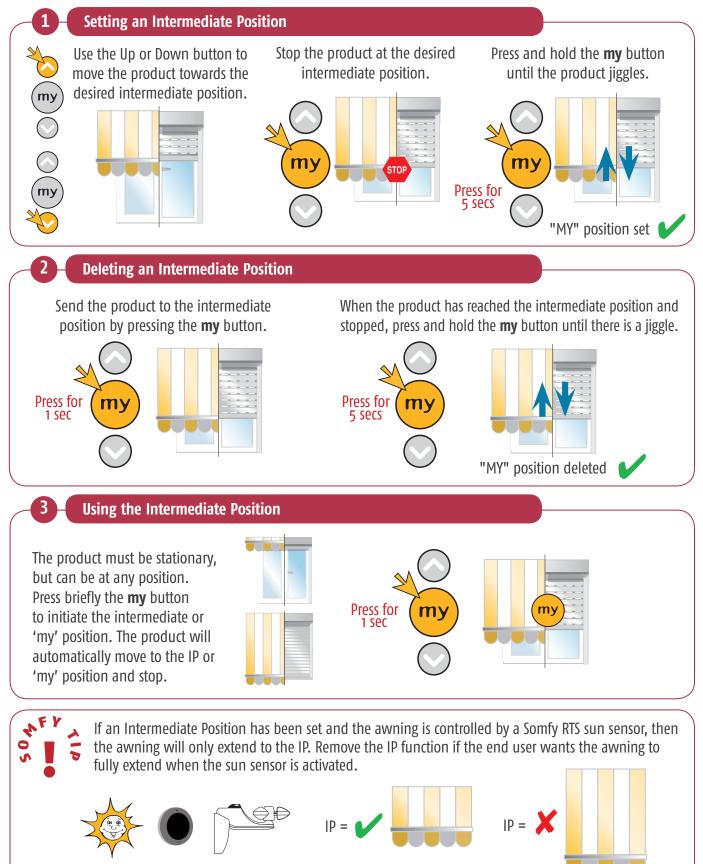

RTS Motors "My" position programming



