

# Centralis Indoor, Centralis Uno RTS, Universal Receiver, Outdoor/Indoor Lighting Receivers

## Programming RTS receivers




### 1 Setting the RTS receiver into the programming mode

Centralis Indoor RTS shown.  
Programming process identical for all receivers listed on page 8.




Press for 3 secs

Press the program button for approximately 3 seconds

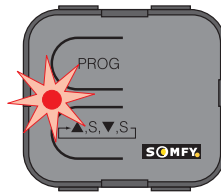

The receiver LED will light up and remain on

AND/OR

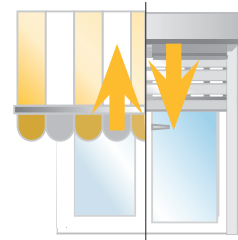

The end product will jiggle

### 2 Recording the RTS control



Smoove RTS


OR

Press for 1 sec




Situo RTS

Press for 1 sec

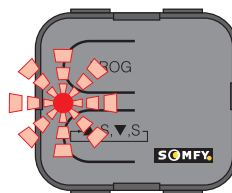

LED Starts to blink

AND/OR

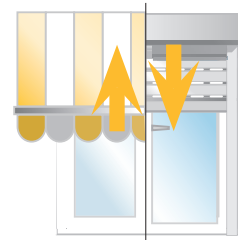


jiggle = control recorded

### 3 Erasing the memory of the RTS receiver




Press for 12 secs

Press the program button for approximately 12 seconds

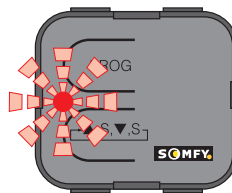

The LED will blink, indicating that the RTS receiver memory has been erased

AND/OR

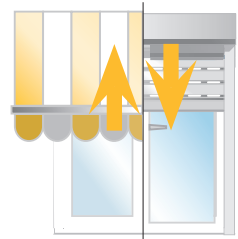

The end product will jiggle twice



Some Somfy receivers have an LED and others provide visual feedback by moving the end product. Ensure you have identified the type of receiver you are working on prior to programming.

It is possible to set Somfy receivers into the programming mode remotely using an RTS control already assigned (particularly useful if the receiver or motor is difficult to reach)



This procedure will mimic what happens in step 1, but without having to gain access to the receiver/motor. After this procedure continue to step 2.

# Centralis Indoor, Centralis Uno RTS, Universal Receiver, Outdoor/Indoor Lighting Receivers

## Programming RTS receivers



### Programming

### De-Programming

