


# Telis 16 RTS and Telis 6 Chronis

## Channel naming

Note: Parameters must be set before naming channels.

### 1 Wake up the remote

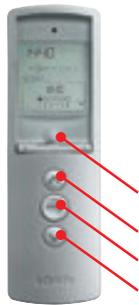

Select any button on the remote and the screen will turn on.



If nothing appears on the screen, remove the battery cover and check the polarity and charge of the batteries.

### 2 Enter manual mode




Briefly press the selection button to enter manual mode.

Note: Manual mode does not need to be selected when programming Telis 16 RTS.



Select the desired channel by using the arrow buttons.

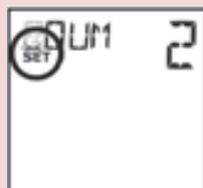

Press and hold the selection button until set appears on the display.

# Telis 16 RTS and Telis 6 Chronis

## Channel naming



### 3 Change the name




Use the navigation button to select the location of the character to be edited.



Briefly press the selection button to edit the character. The character will begin to flash.



Use the navigation buttons to choose the character.

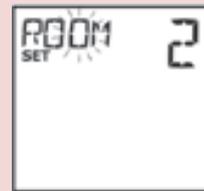

Briefly press the selection button to save character. Repeat step 3 if another character is needed.


### 4 Save channels name



Press and hold the selection button to save the settings.

# Telis 6 Chronis RTS

## Channel naming

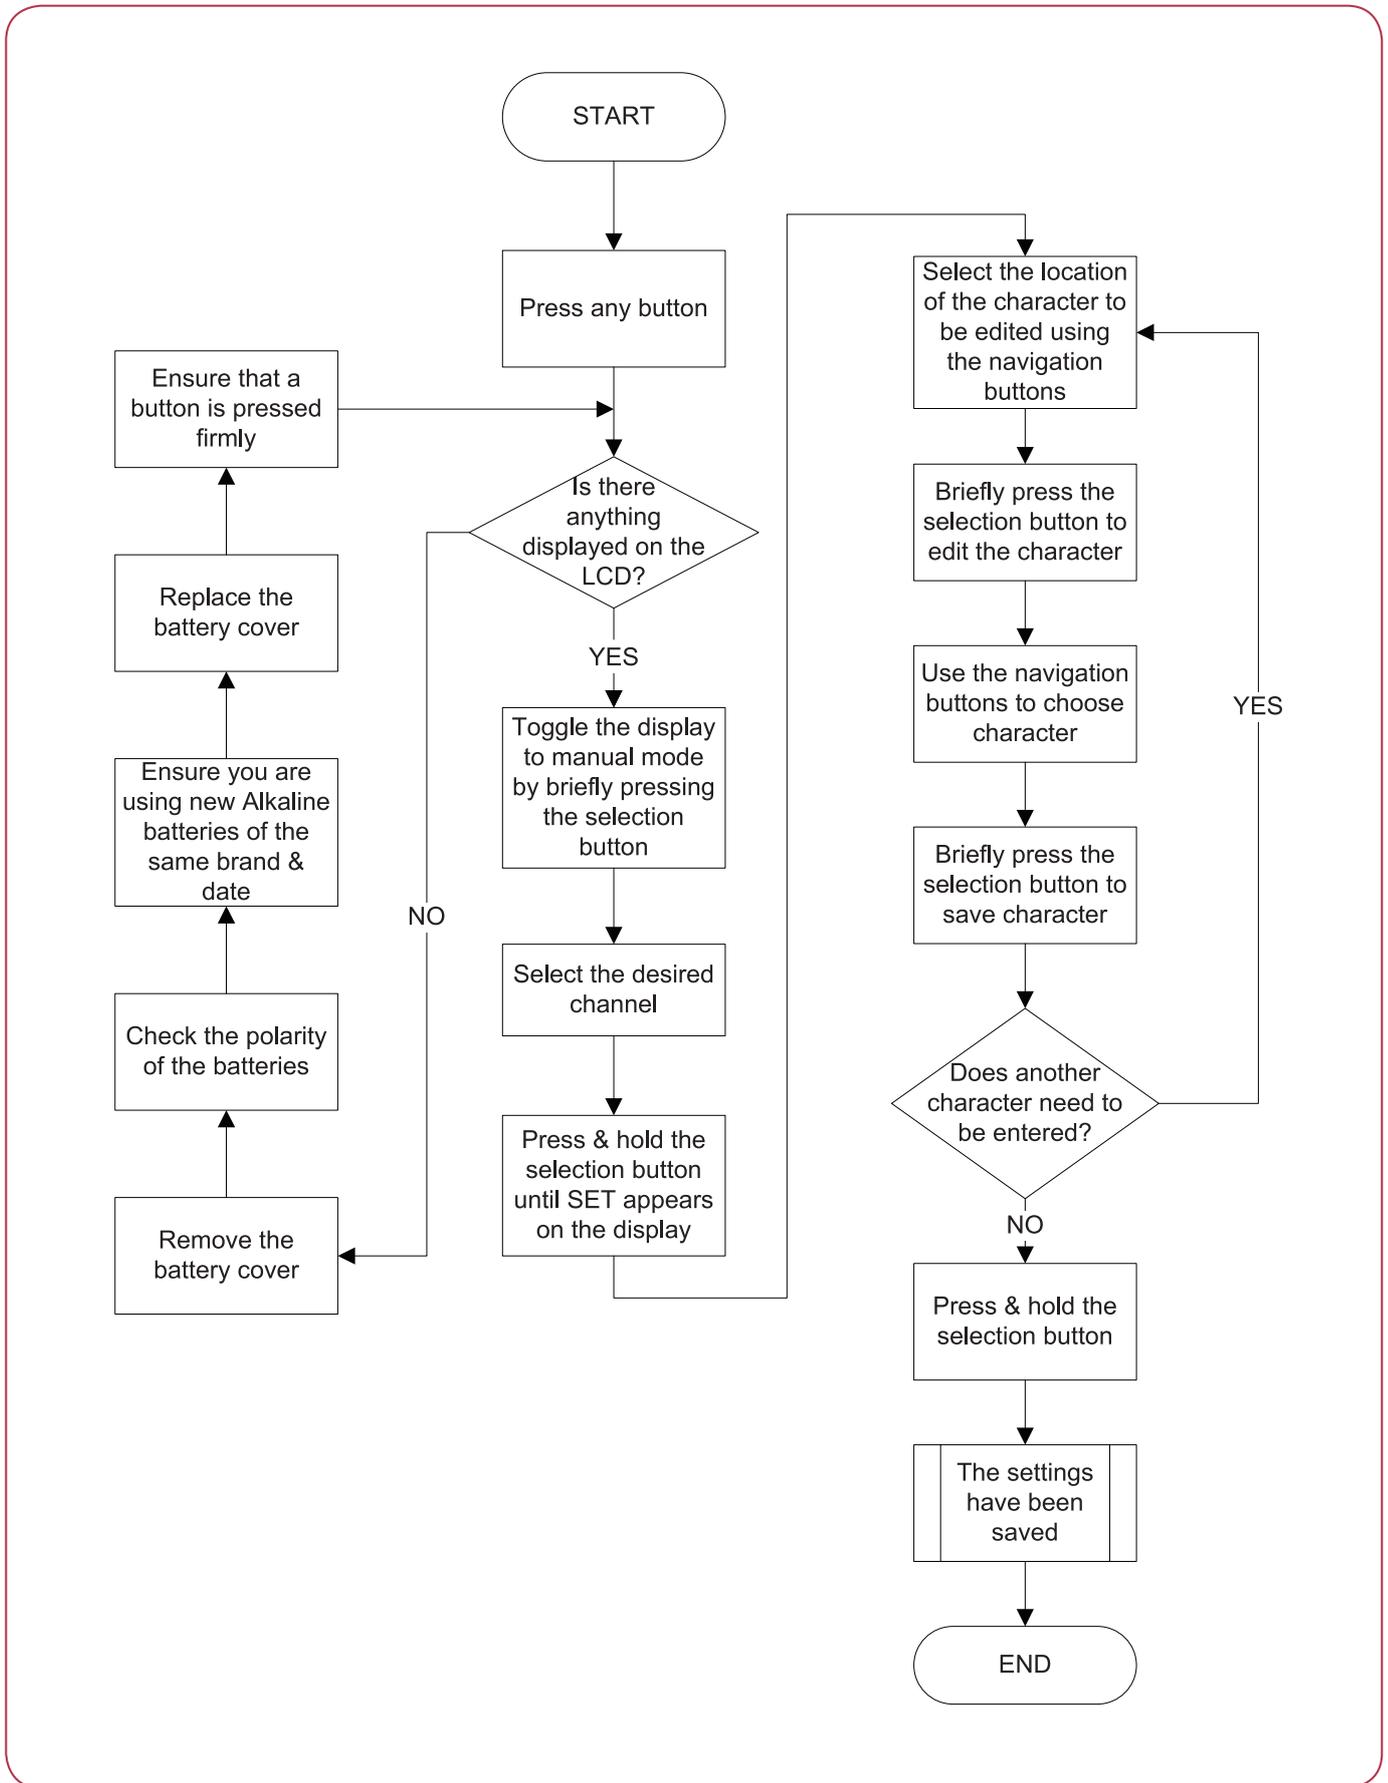

# Telis 16 RTS

## Channel naming

