



Select any button on the remote and the screen will turn on.



If nothing appeared on the screen, remove the battery cover and check the polarity and charge of the batteries.





Toggle the display to automatic mode by briefly pressing the selection button.



Press and hold the selection button until YEAR and SET appear on the display.





Use the navigation buttons to set year.





Briefly touch to the selection button to save the year. MONTH and SET will appear on the display.























