


# CLEARANCES


Depth Clearance required  
on a 90mm blade for Z-Frame  
Reveal Fit is

**60mm**

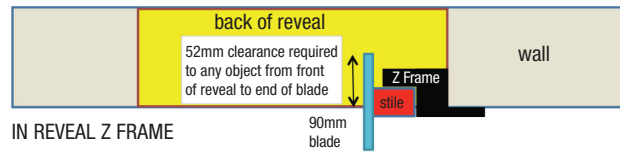


Depth Clearance required  
on a 90mm blade for L-Frame  
In Reveal Fit is

**60mm**

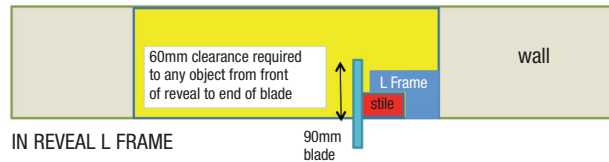


Depth Clearance required  
on a 90mm blade for L-Frame  
Face Fit is

**10mm**

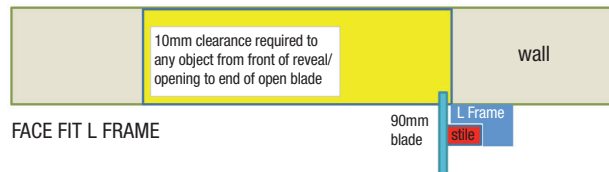


## MEASURING BASICS

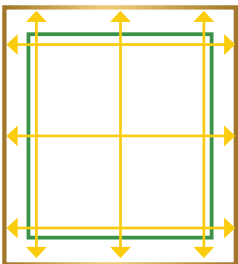

### FACE FIX

1. Ensure the chosen Frame Design and Louvre rotation will work.
2. Measure to either the outside of the Architrave or to where you intend to end the Framing.
3. Measure 3 Horizontal measurements, top, middle and bottom, (write down the largest measurement).
4. Repeat and do the Vertical Measurements, left, middle and right, (again write down the larger of the measurements).
5. Check the squareness visually.

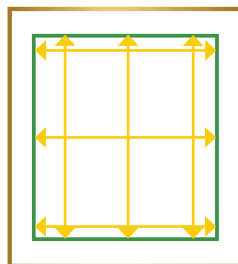

### REVEAL FIX

1. Ensure the chosen Frame Design and Louvre rotation will work.
2. Measure to the inside of the Architrave or Square set of the window.
3. Measure 3 Horizontal measurements, top, middle and bottom, (write down the tightest measurement).
4. Repeat and do the Vertical Measurements, left, middle and right, (again write down the tightest of the measurements).
5. Check the squareness visually.