



STEP 1



Slide the Bottom Bar on to the fabric and insert the first End Cap.

STEP 2




Move the fabric to the other end to give room to insert the second end cap.

STEP 3



Centre the fabric to give equal overhang on both ends - about 9 or 10mm

STEP 4

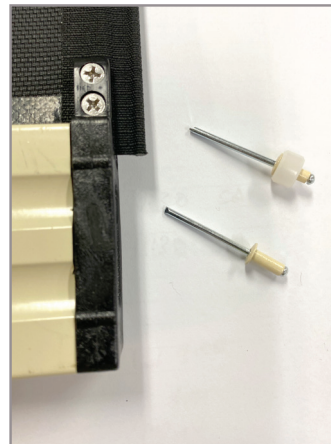

Insert the two screws - a hand screwdriver is best. The LHS screws are fitted from the back. Ensure you fit the shorter top stops and shorter rivets as supplied - so they clear the top of the end cap.

Clamp Type Bottom Bar End Caps - components

Part	Part Number
Screw 6Gx1/2 G304CSK Phillips Self Tapper	24.240.805
End Cap Clamp Bottom Bar HD	24.240.091
End Cap Clamp Bottom Bar BS	24.240.095