



**STEP 1**



Slide the Bottom Bar on to the fabric and insert the first End Cap.

**STEP 2**




Move the fabric to the other end to give room to insert the second end cap.

**STEP 3**



Centre the fabric to give equal overhang on both ends - about 9 or 10mm

**STEP 4**

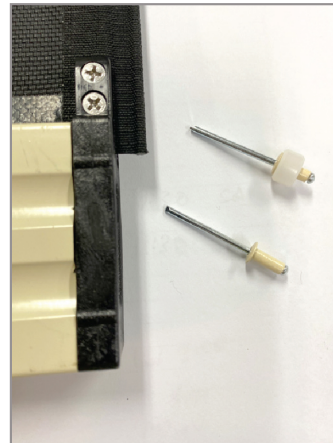

Insert the two screws - a hand screwdriver is best. The LHS screws are fitted from the back. Ensure you fit the shorter top stops and shorter rivets as supplied - so they clear the top of the end cap.

**Clamp Type Bottom Bar End Cap Kits (Assemblies) one per blind**

Kit		Components		
Description	Part Number	Description	Part Number	Qty
HD Bottom Bar End Cap Assly	24.240.092	End Cap Clamp Bottom Bar HD	24.240.091	2
		Fitting Guide A4	N/A	1
		Screw 6Gx1/2 G304CSK Phillips Self Tapper	24.240.805	5
BS Bottom Bar End Cap Assly	24.240.096	End Cap Clamp Bottom Bar BS	24.240.095	2
		Fitting Guide A4	N/A	1
		Screw 6Gx1/2 G304CSK Phillips Self Tapper	24.240.805	5