


STEP 1

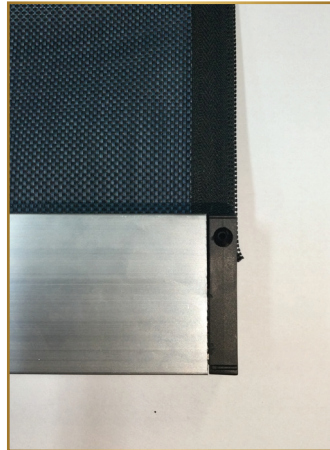


Slide the Bottom Bar on to the fabric and insert the first End Cap.

STEP 2



Move the fabric to the other end to give room to insert the second End Cap.

STEP 3

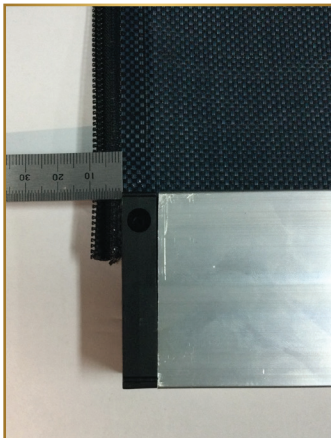

Centre the fabric to give equal overhang on both ends – about 9 or 10mm.

STEP 4



*Insert the screw from either direction – please ensure screwed in by hand.
Note: Clamp will open first before tightening. Take care not to overtighten after clamp has fully closed.*

End Cap MOBB - Assembly - one per blind

Kit		Components		
Description	Part Number	Description	Part Number	Qty
End Cap MOBB - Assembly	24.240.134	Comprises of :		
		End Cap MOBB	24.240.093	2
		Self Tap Screw	24.240.810	3